

AMD RX 6600XT Graphics Card Installation Manual

Model: RX6600XTD68G

©2021 Diamond Multimedia

Package Contents:

- 1. Graphics Card
- 2. Driver and Manual Download Instructions

System Requirements:

- 1. PCIe Expansion Slot
- 2. Display supporting HDMI or Displayport
- 3. 500W Power Supply
- 4. External Power Connector (6pin)
- 5. Window 10 and higher



Step 1.

Turn off your PC, PSU switch and unplug the AC power cord





Open your PC case (refer to your PC manufactures guide for more details)





Remove the PCIe slot covers and or existing Graphics Card.





Insert the Diamond Graphics Card, ensure that is seated and locked in.





Confirm the PCIe locking mechanism is locked



Step 6.

Secure the card with the bracket thumb screws



Step 7.

Plug the external power 8 pin connector. Note: you may also use one 6 pin and one 2 pin if you don't have an 8 pin connector.





Put your PC case cover back into the closed position



Step 9.

Connect your video display cable to the HDMI or DP cable to your monitor



Step 10

Plug the AC power cord back in, turn your PSU switch to the ON position and power up your PC

Driver Installation:

For the latest drivers visit the AMD support site from the link below:

https://www.amd.com/en/support

You can download the Auto Detect or manually select from the list as shown below:

- Please select -	- Please select -	- Please select -	- Please select -
Graphics	AMD Radeon [™] 6000 Series	AMD Radeon™ 6900 Series	AMD Radeon [™] RX 6600 XT
Professional Graphics	AMD Radeon [™] 6000M Series	AMD Radeon™ 6800 Series	AMD Radeon™ RX 6600
Server Accelerators	AMD Radeon [™] 2nd generation Vega	AMD Radeon™ 6700 Series	Contraction of the provide
Processors with graphics	AMD Radeon** 5700 Series	AMD Radeon™ 6600 Series	
Chipsets	AMD Radeon ¹⁴ 5600 Series		
Processors	AMD Radeon™ 5500 Series		
Desktop Kit	AMD Radeon [™] 5300 Series		

Technical Support

https://www.diamondmm.com/diamond-multimedia-support/

Email: support@diamondmm.com

Chat: diamondmm.com